Hot Key functions

Keyboard

Press the Fn key on the Keyboard to activate the below functions.

Icon	Windows	Android	IOS
Ē.	Function lock	Function lock	Function lock
1	Undo	Undo	Undo
X	Cut	Cut	Cut
	Сору	Сору	Сору
	Paste	Paste	Paste
->-	Brightness -	Brightness -	Brightness -
- ;¢-	Brightness +	Brightness +	Brightness +
I◀◀	Previous track	Previous track	Previous track
▶	Play/Pause	Play/Pause	Play/Pause
▶ ▶I	Next track	Next track	Next track
ЦX	Mute	Mute	Mute
Ŷ	Volume -	Volume -	Volume -
口»)	Volume +	Volume +	Volume +
<u></u>	N/A	Virtual keyboard	Virtual keyboard
%	Battery charge level	Battery charge level	Battery charge level

Keypad

Press the Fn key on the Keypad to activate the below functions.

Icon	Windows	Android	IOS
	Сору	Сору	Сору
	Paste	Paste	Paste
=	Equals	Equals	Equals

ergeapt

Dual Combo

OPC13BW

User Manual





Contents

1 x Ergoapt Keyboard 1 x 150cm cable 1 x Ergoapt Keypad 1 x 40cm cable

1 x User Manual

Keyboard and Keypad specifications

Compatible systems: Windows, Android, IOS

Sleep time: Idle for 10 minutes

Charging time: 2 - 4 hours Operating distance: Up to 10m The Ergoapt Dual Combo is a Keyboard and Keypad combo that can be connected as wired devices by the cables or wirelessly via Bluetooth.

Indicator lights

Keyboard

Caps: White light appears when Caps Lock is on.

Pair: Blue light flashes when the Keyboard is in pairing mode.

Power *Wired mode*:

Red light appears while the Keyboard is plugged in and charging. The light will turn green when the Keyboard is fully charged.

Power Bluetooth mode:

Green light appears for 3 seconds when the Keyboard is switched on.

Power Battery charge level:

Flashes green 4 times = 76% - 100% charge.

Flashes green 3 times = 51% - 75% charge.

Flashes green 2 times = 26% - 50% charge.

Flashes green 1 time = 1% - 25% charge.

Keypad

Wired mode:

Red light appears while the Keypad is plugged in and charging. The light will turn green when the Keypad is fully charged.

Bluetooth mode:

Green light appears for 3 seconds when the Keypad is switched on.

Green light flashes when the Keypad is in pairing mode.

How to charge

Use the included USB cable to charge the Keyboard, plug one end into the Keyboard and the other into a USB port.

The Keypad can be charged by plugging into the Keyboard while the Keyboard is charging or by plugging the Keypad directly into a USB port. It will take approximately 2 - 4 hours for a full charge.

Energy saving mode

When in Bluetooth Mode, the Keyboard and Keypad will enter sleep mode after being idle for 10 minutes.

To wake, press any key on both units. The Keyboard and Keypad will wake after 4 seconds of a button being pressed.

When not in use for a prolonged period of time, it is recommended that the Keyboard and Keypad be switched off to conserve the battery life.

Connecting to the computer

Wired Mode

Plug the Keyboard into the computer via the longer included USB cable. Plug the Keypad into the Keyboard via the shorter included USB cable.

Bluetooth Mode

- 1. To pair the Keyboard, switch on the Keyboard, the Power light will appear for 3 seconds.
- 2. Place the Keyboard into pairing mode by pressing Fn + Pair, the Pair light will begin to flash blue quickly.
- 3. Open up Bluetooth Settings on the device, select *Ergoapt Keyboard* from the list.
- 4. When the light stops blinking, the device is paired to the Keyboard.
- 5. To pair the Keypad, switch on the Keypad, the Power light will appear for 3 seconds.
- 6. Place the Keypad into pairing mode by pressing Fn + Pair, the indicator light will begin to flash green quickly.
- 7. Open up Bluetooth Settings on the device, select *Ergoapt Keypad* from the list.
- 8. When the light stops blinking, the device is paired to the Keypad.

When the Keyboard and Keypad are plugged in to charge, the Bluetooth function automatically switches off and the connection to the computer is made via the cable.

When the Keyboard and Keypad are unplugged the Bluetooth connection switches back on automatically.

Troubleshooting

Wired connection

Make sure all cables are firmly plugged in. Connect the keyboard directly to the computer, connecting via a peripheral or hub can impact performance.

Bluetooth connection

If you are unable to connect the keyboard and/or keypad to a device, follow the below steps:

- 1. Ensure that the keyboard and/or keypad and device have full battery charge so that the connection is not interrupted by a loss of power.
- 2. Confirm that the device's Bluetooth is turned on and searching for connections.
- 3. Ensure that the keyboard and/or keypad are in pairing mode.
- 4. Place the keyboard and/or keypad and device within 10m of each other.