## **ASSEMBLY INSTRUCTIONS:**

Product Code: PU605M

Product Name: PU605M Medium Back Chair

## TIME REQUIRED:

10 minutes

## **TOOLS REQUIRED:**

Screwdriver, Electric Drill, Pencil, Measuring tape/Ruler \*Tools are not included.

## **SKILL REQUIRED:**

Easy Hard

The Assembly Skill Rating is a 5-point system that shows the degree of effort needed in assembling a specific product. With 1 being easy for the average person and 5 requiring an expert. For most products, two persons are recommended.

#### NOTE

- As this is a commercial product, some intermediate skills may be required.
  - No pre-drill holes or markings are provided on our table or desk tops.
    - Please check you have all hardware before assembling.
- If you are missing any hardware, please contact your Rapidline reseller. Please ensure you have the name of the item, required hardware part and quantity.
  - Please retain your receipt as proof of purchase to validate your warranty.
  - · Assemble on a clean, flat, smooth surface such as a rug or carpet to avoid parts from being scratched.
    - Remove all wrapping materials, including staples and packing straps before you start to assemble
      - Keep all hardware parts out of reach of children.

### CAUTION


- Heavy product. Do not attempt to lift or move without help
- Do not tighten screws and bolts until completely assembled.
- Do not use this product unless all bolts and screws are firmly secured and tightened.

#### WARNING

- If parts are missing, broken, damaged or worn stop using the product until all repairs are made.
  - Failure to follow these warnings could result in serious injury.

# PU605M

(1) Seat	(2) Arms	(3) Mechanism	(4) Star base	(5) Gasslift	(6) Tools
	X2		O NO X5		X4 8X16 M6

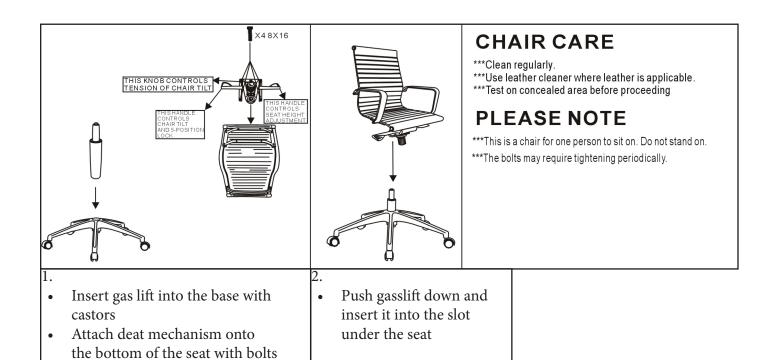



provided